
 **Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust, causing a fire/explosion.**

 **Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes, which may cause unconsciousness or death.**

TIMED CLIMATE CONTROL

The Timed climate control system provides a comfortable temperature inside the cabin, in advance of the driver and passengers entering. Dependent on the external temperature, the system draws in fresh air to cool the cabin or operates the auxiliary heater to warm it.

The auxiliary heater is also operated to warm the engine and to aid starting in very cold conditions.

Note: *If the auxiliary heater is used to warm the engine, the cabin will not be warmed.*

The Timed climate control system is controlled by the Touch screen and can be activated/deactivated by the Timed climate remote control.

The system may not operate or will switch off automatically in the following scenarios.


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

SETTING A TIME FOR TIMED CLIMATE OPERATION

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the climate control **AUTO** or **A/C** button will flash. **AUTO** indicates the engine or cabin are being heated. **A/C** indicates the cabin is being ventilated. The choice of operation is automatically determined by the system, depending on external temperature.

Note: *The system will cease operation when the engine is started.*

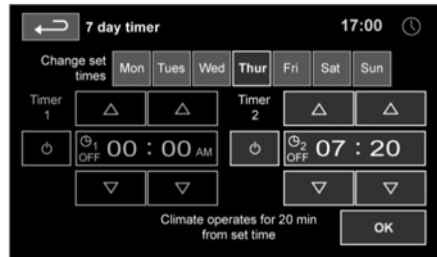

To set a Timed climate program:

1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select **7 day timer**, or **Single event**, then select the timer button. If **7 day timer** is selected, then select the day for which you want to set a program. Alternatively, select **All Week** to select the same start time for every day.
3. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off, using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.