

- If an **Ensemble** is selected from the list, all available channels from that ensemble will be displayed.
- Sorting by **Subchannel** is only available when the current channel is broadcasting subchannels.
- If **Category** is selected, touch the chosen category to view corresponding channels, before making your selection from the list.

Once the desired selection has been made, select the **Back** soft key to return to the main DAB menu.

8. **Subchannel:** If subchannels are broadcast by the current channel, this soft key will be active. Select to allow subchannels and then select the required subchannel with the seek down/up keys.

9. **Auto-tune:** Select to scan for all available DAB ensembles/channels. This needs to be done before using the DAB radio for the first time.

Auto-tune is also useful when travelling long distances, so regional ensembles can be tuned.

During auto-tune, a pop-up shows tuning progress.

The auto-tune process will not affect current presets, but some presets may not operate if the channel they relate to is no longer available (**No reception** displays).

10. **Station presets:** Each DAB band has 6 preset positions.
- Touch and release to tune the radio to the station stored on that preset.
 - Touch and hold to store the current station on that preset (the radio will mute while the station is stored).
 - Use the seek buttons on the steering wheel to select the next or previous preset station.

Note: If you attempt to select a preset channel that is now unavailable or invalid, **No reception** is displayed.

DAB RADIO SETTINGS

In **Settings:**

- If the **Link DAB** setting is switched on and the signal strength for a channel falls below an acceptable level, the audio unit will automatically search other available ensembles for a channel with the same name.

If an alternative local channel is found, the new channel is played automatically after a few seconds. If the channel is not found after a few seconds, the message **No reception** is displayed.

The word **Link** is displayed at the top of the Touch screen when **Link DAB** is enabled.

- Select **DAB country** if driving into another country. Scroll through the country options to choose the appropriate one. This will prompt an auto-tune.

Note: This option is disabled while the vehicle is moving.

- Choose **DAB format** if moving to a region that uses a different digital band. Available formats are:

- L Band.
- Band III.
- L Band & Band III.
- L Band Canada.
- L Band Can & Band III.

This will prompt an auto-tune.

Note: This option is disabled while the vehicle is moving.