

6. Once set, the timer events can be turned on or off, as required, in the Timed climate screen, by selecting the **7 day timer** or the **Single event** soft key.


Note: Set times should be programmed 20 minutes before the planned journey.

Note: The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. See **44, INSTRUMENT PANEL MENU**.

Note: Timed climate will only operate once between engine starts. For example, a remote Timed climate request will not be performed if a programmed Timed climate event has already occurred.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled, by touching the relevant power soft key on the timer set up menu, or the **Power** soft key on the **Timed Climate** information home menu.

USING THE TIMED CLIMATE REMOTE

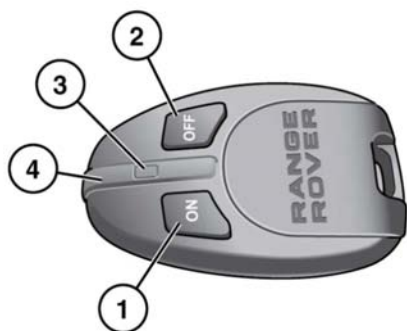

E144900

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

Note: Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 metres. There is no need to point the remote control at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate green, to confirm that a remote climate program has been initiated. The LED flashes once every 2 seconds, to indicate that the heater is active.

The remote climate program will continue for 20-30 minutes, after which it will switch off automatically to prevent the vehicle's battery from discharging. It also turns off automatically if the engine is started.

The LED indicator signals various states and conditions for the remote climate as follows:

- Illuminates green when the **ON** button is pressed, then quickly flashes green to indicate that heater operation has been requested.
- Illuminates green followed by red when the **OFF** button is pressed, to indicate that the heater has been requested to shut down.
- Illuminates green, then quickly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is no communication with the receiver. This normally occurs if the vehicle is too far away.
- Illuminates green, then slowly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is an error.
- Flashes red when either the **ON** or **OFF** button is pressed, to indicate that the timed climate remote's battery needs replacing.

Note: The Timed climate remote will only operate once per engine start, to maintain the battery's condition.