






## TELEPHONE SYSTEM ICONS


 Connect: Use to send or accept a call and access the Last 10 calls list.

 Disconnect: Use to end or reject a call.


 No phone connected.


 Phone signal strength indicator.


 Phone battery level indicator.

 **Bluetooth.** Indicates that a **Bluetooth®** wireless technology device is connected.

 Tick: Indicates that a **Bluetooth** wireless technology device is paired.

 Voicemail: Press and hold to dial the stored voicemail number.

 Scroll bar up arrow: Use to scroll up lists of detected phones, calls, or phonebook entries.

 Scroll bar down arrow: Use to scroll down lists of detected phones, calls, or phonebook entries.

## STEERING WHEEL CONTROLS



E 150755

1. Press to scroll back through received calls, the Last 10 list, and finally to exit the list.
2. Increase the volume when in a call, scroll up a displayed list, or a number listed for a stored contact.
3. Press to scroll to the Last 10 list and received calls.
4. Decrease the volume when in a call, or scroll down a displayed list or a number listed for a stored contact.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the Last 10 dialled list. Press and hold to access the phonebook list view.

**Note:** When scrolling through a phonebook or the Last 10 list, each contact is also displayed in the Message centre.

**Note:** In order to scroll through any Last 10 list, the Phone button (5) must first be pressed.

## CALL VOLUME

The phone's call volume is operated by the Audio system's volume control.