


## CLIMATE CONTROL

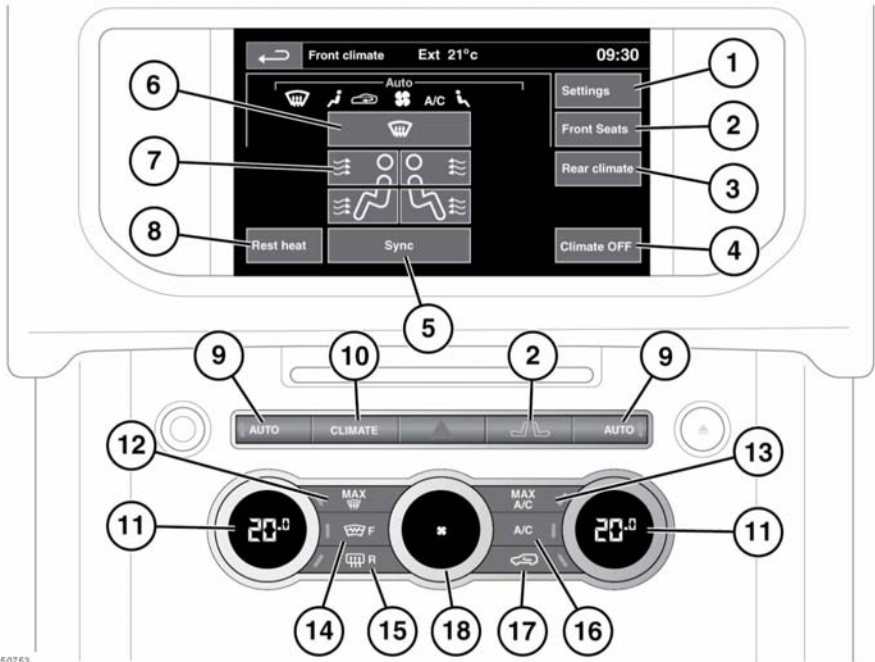

E150753

Press the **CLIMATE** hard key to access the Climate control Touch screen menu.

1. Climate control settings menu.
2. Front heated/climate seat menu.  
*Note: Heated/climate seats operate only when the engine is running.*
3. **Rear climate** menu.
4. Climate control system On/Off.
5. Synchronises all climate zones to the driver's settings.
6. Distributes air to the windscreen.
7. Air distribution.  
*Note: More than 1 setting may be selected at a time, to achieve the desired distribution.*

8. **Rest heat:** With the engine switched off, press to operate. While the engine is still warm, it is possible to provide cabin heating, by using the residual heat from the engine. This facility can be selected for up to 15 minutes after the engine is switched off and will operate until the engine cools.  
*Note: Rest heat is only available on vehicles fitted with an auxiliary heater.*
9. **AUTO:** Press to automatically maintain the cabin comfort based on the selected temperature.
10. **CLIMATE** hard key: Shortcut to the Touch screen Climate control menu.
11. Temperature controls: For individual driver/passenger settings.