




Head restraints

HEAD RESTRAINTS

 Adjust, so that the top of the head restraint is the same height as the top of the seat occupant's head. Incorrect adjustment increases the risk of death or serious injury in the event of a collision.


 It is possible to swivel the head restraint forwards or backwards. For greater protection in the event of a collision, the head restraint should be adjusted so that it is as close to the back of the head as possible.

 Do not drive, or carry passengers with the head restraints removed from occupied seats. The absence of a correctly adjusted head restraint increases the risk of neck injury in the event of a collision.

 Never adjust the head restraints while the vehicle is in motion.

 Always store a removed head restraint securely.

ELECTRIC HEAD RESTRAINTS

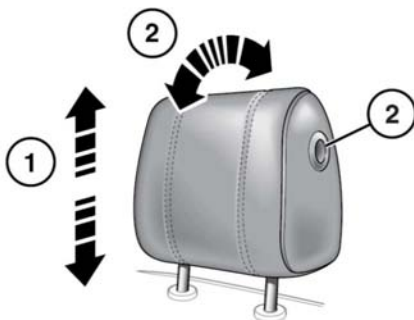


E139074

1. To adjust the height of the head restraint.
 - Front (see 16, **ELECTRIC SEATS**).

- Rear (see 19, **EXECUTIVE CLASS SEATS**).

2. To adjust the angle of the head restraint, press the locking button on the side of the restraint and tilt to the desired position.

Note: There is no angle adjustment on head restraints where a rear media screen is fitted.

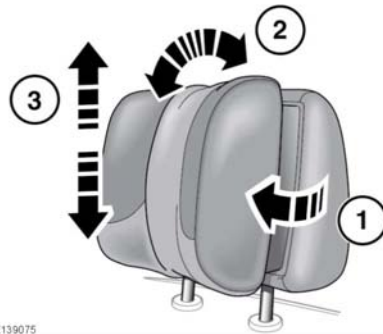

E139075

1. Pull the wing heads forward, in to the first or second position.
2. Tilt the head restraint to adjust the angle.

Note: There is no angle adjustment on front head restraints where a rear media screen is fitted.

3. To adjust the height of the head restraint.
 - Front (see 16, **ELECTRIC SEATS**).
 - Rear (see 19, **EXECUTIVE CLASS SEATS**).

Note: It is not possible to remove electric head restraints.