


- ❗ Seek qualified assistance immediately, if there is a noticeable drop in the fluid level.
  - ❗ If fluid loss is slow, the reservoir may be topped up to the upper level mark, to enable the vehicle to be driven to a repair facility for examination. However, it is recommended that you seek qualified assistance before driving the vehicle.
  - ❗ Do not attempt to drive the vehicle to a repair facility, if there is a danger that leaking fluid will come into contact with a hot surface, such as the exhaust.
2. Remove the filler cap.
  3. Using the approved fluid, top up the reservoir until the fluid level is between the **MIN** and **MAX** marks. See **280, LUBRICANTS AND FLUIDS**.
  4. Replace the filler cap.

Check and top up the fluid level with the engine switched off and the system cold.

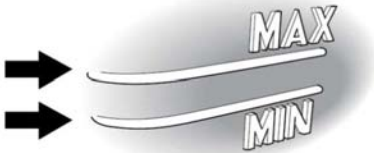

E150756

The fluid level should be maintained between the **MIN** and **MAX** marks.

## TOPPING UP THE DYNAMIC RESPONSE FLUID

- ❗ Dynamic response fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.
  - ❗ Do not fill the reservoir above the **MAX** mark.
1. Clean the filler cap before removing, to prevent dirt from entering the reservoir.