

# Warning lamps

## PARKING BRAKE (RED)



Illuminates when the Electric Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## BATTERY CHARGE (RED)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled.

The lamp will extinguish when the relevant seat belt is buckled.

**Note:** *Objects on the front passenger seat may activate the Seat belt reminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See 28, USING THE SEAT BELTS.*

## LANE DEPARTURE WARNING (RED)



If the Lane departure warning system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate Direction indicator, then the relevant lane will illuminate red. This may also be accompanied by a vibration felt through the steering wheel.

## ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates when the engine is running, there is an emissions-related fault with the engine or transmission. The vehicle can be driven, but may enter Limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on to indicate that the glow plugs are active.

## BRAKE (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.