
MANUAL TRANSMISSION

- Never attempt to engage Reverse (R)
 gear while the vehicle is in forward
 motion. This may result in serious
 transmission damage and costly repairs.
- Do not rest your hand on the gear lever while driving, as this may cause premature wear to the gear selector mechanism.
- Do not rest your foot on the clutch pedal.



The transmission consists of a 6 speed manual gearbox and a high/low range transfer box. A centre differential distributes the drive to the front and rear axles, providing permanent four wheel drive.

TRANSFER GEARBOX

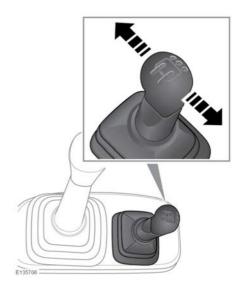

High range: Use for all normal road driving and when off-road driving across dry, level terrain.

Low range: Use only when low speed manoeuvring is necessary. Also use for more extreme off-road conditions where progress in High range cannot be maintained. Move back to High range as soon as conditions allow.

Transfer neutral: In transfer neutral position, there is no drive to the road wheels. Use this position when the vehicle is towed.

STATIONARY RANGE CHANGING

With the engine running:

- 1. Press the clutch.
- 2. Move the transfer lever to the neutral position then into the desired range.

If there is resistance when attempting to select the desired range, do not force the lever. Instead: