


RADIO CONTROLS

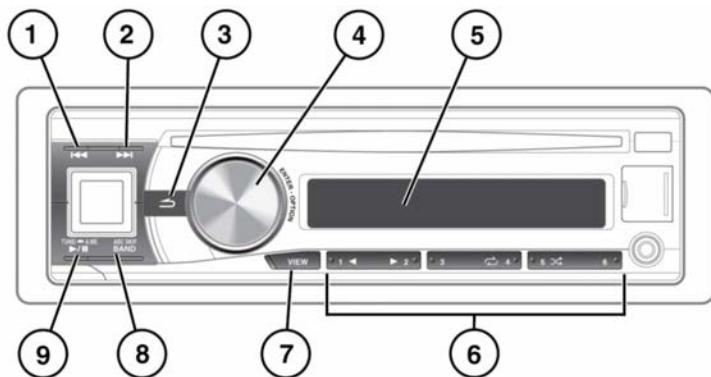

E145938

1. Seek down:
 - Short press - to auto-seek down the frequency to the previous radio station.
 - Long press - to seek continuously down through the Radio Frequencies (RF).
2. Seek up:
 - Short press - to auto-seek up the frequency to the next radio station.
 - Long press - to seek continuously up through the Radio Frequencies (RF).
3. Back:
 - Short press - to return to the previous menu.
 - Long press - to close the setup menu.
4. Volume control/frequency search/menu select:
 - Rotate to adjust the volume.
 - Press to enter frequency search mode and then rotate to select the desired frequency. Once the desired frequency has been reached, press again to exit frequency search mode.
5. When a menu is open, rotate to switch between menu items and press to confirm a selection.
5. Information display screen.
6. Preset stations:
 - Short press - to select a preset station.
 - Long press - to store the current radio frequency.
7. Change the displayed information.
8. Band select:
 - Short press - to switch between bands. Select from **F1** (FM1), **F2** (FM2), **F3** (FM3), **MW** and **LW**.
 - Long press - to activate Traffic Announcements (TA). The radio will automatically tune to any TA broadcasts.
9. Tuning mode select:
 - Short press - to select between the following modes:
 - **DX SEEK** - both strong and weak stations will be stored during auto-store.