


RADIO CONTROLS

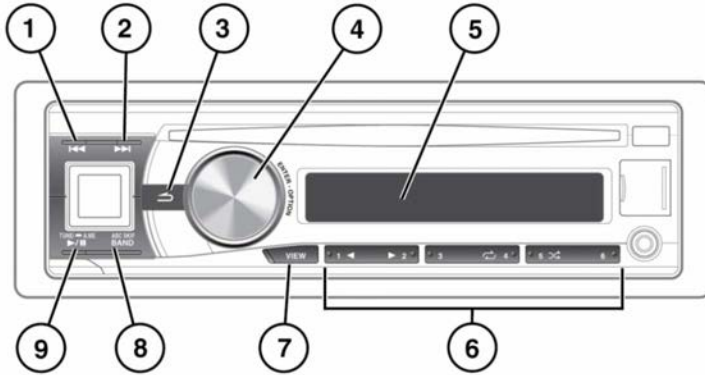

E145938

1. Seek down:

- Short press - to auto-seek down the frequency to the previous radio station.
- Long press - to seek continuously down through the Radio Frequencies (RF).

2. Seek up:

- Short press - to auto-seek up the frequency to the next radio station.
- Long press - to seek continuously up through the Radio Frequencies (RF).

3. Back:

- Short press - to return to the previous menu.
- Long press - to close the setup menu.

4. Volume control/frequency search/menu select:

- Rotate to adjust the volume.
- Press to enter frequency search mode and then rotate to select the desired frequency. Once the desired frequency has been reached, press again to exit frequency search mode.

- When a menu is open, rotate to switch between menu items and press to confirm a selection.

5. Information display screen.

6. Preset stations:

- Short press - to select a preset station.
- Long press - to store the current radio frequency.

7. Change the displayed information.

8. Band select:

- Short press - to switch between bands. Select from **F1** (FM1), **F2** (FM2), **F3** (FM3), **MW** and **LW**.
- Long press - to activate Traffic Announcements (TA). The radio will automatically tune to any TA broadcasts.

9. Tuning mode select:

- Short press - to select between the following modes:
 - **DX SEEK** - both strong and weak stations will be stored during auto-store.