
RADIO CONTROLS

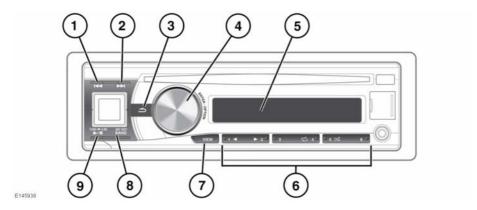

1. Seek down:

- Short press to auto-seek down the frequency to the previous radio station.
- Long press to seek continuously down through the Radio Frequencies (RF).

2. Seek up:

- Short press to auto-seek up the frequency to the next radio station.
- Long press to seek continuously up through the Radio Frequencies (RF).

Back:

- Short press to return to the previous menu.
- Long press to close the setup menu.
- Volume control/frequency search/menu select:
 - Rotate to adjust the volume.
 - Press to enter frequency search mode and then rotate to select the desired frequency. Once the desired frequency has been reached, press again to exit frequency search mode.

- When a menu is open, rotate to switch between menu items and press to confirm a selection.
- 5. Information display screen.
- 6. Preset stations:
 - Short press to select a preset station.
 - Long press to store the current radio frequency.
- 7. Change the displayed information.
- 8. Band select:
 - Short press to switch between bands.
 Select from F1 (FM1), F2 (FM2), F3 (FM3), MW and LW.
 - Long press to activate Traffic Announcements (TA). The radio will automatically tune to any TA broadcasts.
- 9. Tuning mode select:
 - Short press to select between the following modes:
 - DX SEEK both strong and weak stations will be stored during auto-store.