

2. Select from the following options.

- **PLAYLIST.**
- **ARTIST.**
- **ALBUM.**
- **SONG.**
- **PODCAST.**
- **GENRE.**
- **COMPOSER.**
- **AUDIOBOOK.**

Alternatively, select **SHUFFLE ALL** to play all of the audio tracks in a random sequence.

When the list has been refined, the alphabet search can be used to assist further.

1. In search mode, press **ABC SKIP/TA** to display the letter selection list.
2. Select the desired letter; the list of tracks beginning with that letter will now be displayed.
3. Select the desired song and press the menu select control to begin playback.

Alternatively, the preset buttons **1 - 6** can be used to jump to a point in the selected category. For example, pressing **1** will target the first song in the category and pressing **6** will target the song that is 83% of the way through the category track list.

## MP3 FILE PLAYBACK

MP3 files are played back in the order that they are written to the disc. This order is dependent on the writing software used and; therefore, the playback order may not be as expected. For more information, refer to the writing software manufacturer's documentation.