

2. Select from the following options.

- **PLAYLIST.**
- **ARTIST.**
- **ALBUM.**
- **SONG.**
- **PODCAST.**
- **GENRE.**
- **COMPOSER.**
- **AUDIOBOOK.**

Alternatively, select **SHUFFLE ALL** to play all of the audio tracks in a random sequence.

When the list has been refined, the alphabet search can be used to assist further.

1. In search mode, press **ABC SKIP/TA** to display the letter selection list.
2. Select the desired letter; the list of tracks beginning with that letter will now be displayed.
3. Select the desired song and press the menu select control to begin playback.

Alternatively, the preset buttons **1 - 6** can be used to jump to a point in the selected category. For example, pressing **1** will target the first song in the category and pressing **6** will target the song that is 83% of the way through the category track list.

MP3 FILE PLAYBACK

MP3 files are played back in the order that they are written to the disc. This order is dependent on the writing software used and; therefore, the playback order may not be as expected. For more information, refer to the writing software manufacturer's documentation.