
Do not place the lamp unit face down on hard or abrasive surfaces. Doing so may scratch the surface of the lens.

## **HEADLAMP BULB REPLACEMENT**


Halogen bulbs are used for high beam and low beam headlamps. Take care not to touch the glass part of the bulb with your fingers; always use a cloth to handle the bulb. If necessary use methylated spirits to remove finger prints.

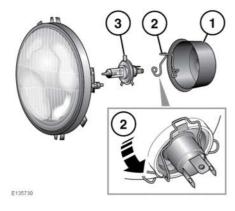

- 1. Remove the cover.
- 2. Release the spring clip that secures the bulb.
- 3. Remove the bulb.

When refitting the cover, make sure there is a good contact seal around the new bulb. Refit the electrical connector.

## SIDE LAMP BULB REPLACEMENT

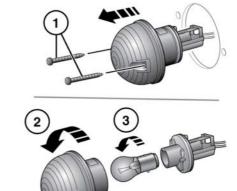

E135731

With the headlamp unit removed:

- 1. Remove the retaining screws and withdraw the unit.
- 2. Turn the lens counterclockwise to release the lamp unit.
- **3.** Press the bulb into the unit, then turn it and remove.

## DIRECTION INDICATOR BULB REPLACEMENT

This procedure is identical to the side lamp bulb replacement procedure. See **73**, **SIDE LAMP BULB REPLACEMENT**.