
## Heating and ventilation

## **CLIMATE CONTROL**

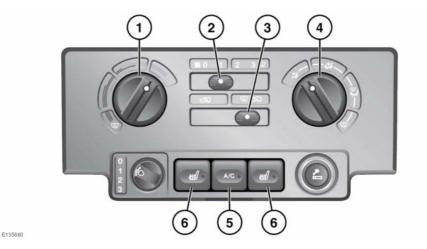

- 1. Temperature control: Rotate to adjust.
- 2. Blower speed: Slide to adjust air flow speed through the vents.
- Recirculation: Slide for recirculated or fresh air. Recirculation helps to maintain a high or low temperature and is useful for preventing fumes from entering the vehicle.
- **4.** Air distribution: Rotate to direct air flow.
- **5.** Press to switch A/C on/off. The switch indicator will illuminate when switched on.

**Note:** The blower will switch on automatically if A/C is selected when the blower is set to 0.

**Note:** If interior temperature is higher than exterior temperature, before operating A/C, fully ventilate the vehicle by using the blower control, windows and sunroof.


**Note:** During A/C operation, puddles may form under the vehicle. This is normal and does not indicate a fault with the system.

6. Seat heaters: Press to switch on/off.

To prevent battery discharge, seat heaters should be operated only while the engine is running.

## **HEATED SCREENS**

- Do not stick labels over the screen heating elements.
- ① Do not scrape or use abrasive materials to clean the inside of the screens.

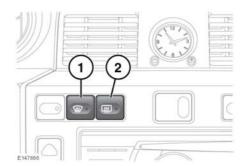

- Heated windscreen switch.
- 2. Heated rear screen switch.