

Interior locking.....8

J

Jacking points.....101

Jacking up the vehicle.....100

L

Label locations.....106

Lamps.....21

brake lamp.....74

bulb changing.....72

bulb replacement.....73

bulb specification.....116

condensation.....22

warning lamps.....29

Lashing points.....104

Leather cleaning.....78

License plate bulb.....75

Lighting

interior lamps locations.....23

Load carriers

roof mounted.....35

Load carrying

securing a load.....35

Load securing.....35

Locking.....8

door locks and release levers.....8

mislock.....8

Locking and arming the alarm.....8

Locking wheel nuts.....99

Low fuel warning lamp.....31

Low oil pressure warning lamp.....29

Low range gearbox

selecting high range on the move.....46

Lubricants specifications.....115

Luggage

loadspace area.....35

Luggage compartment

anchor points.....35

M

Main fuse box.....92

Maintenance

after off-road driving.....77

arduous driving conditions.....70

brake fluid level.....83

bulb changing.....72

bulb specification.....116

capacities.....114

changing a fuse.....91

cleaning

alloy wheels.....77

exterior.....77

interior.....78

leather.....78

seat belts.....78

under body.....77

cleaning the soft top.....78

closing the bonnet.....72

clutch fluid level.....82

daily checks.....69

diesel particulate filter (DPF).....69

engine coolant level.....81

engine oil level.....80

fuel system.....71

label locations.....106

lubricants and fluid specifications.....115

number plate bulb.....75

oil top up.....81

paintwork repair.....77

passenger compartment fuse box.....92

power steering fluid level.....84

secondary fuse box.....93

smart key battery.....6

washer fluid level.....84

weekly checks.....69

Manual seats.....9

base refit.....11

base removal.....10

Manual sunroof

operation.....26

removal.....26

Minor paintwork repairs.....77

Mirrors

driver controls.....

exterior mirrors.....27