


PORTABLE MEDIA CONTROLS (STANDARD SYSTEM)

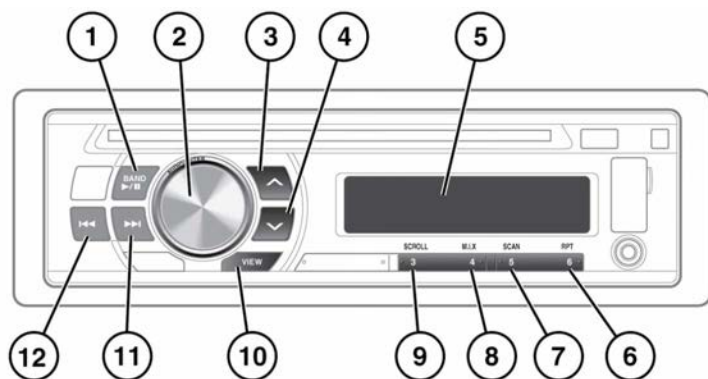

E147587

1. Pause/play.
2. Volume control/menu select:
 - Rotate to adjust the volume.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
3. Previous folder (MP3 mode).
4. Next folder (MP3 mode).
5. Information display screen.
6. Repeat:
 - Short press - to continuously play the current track.
 - Long press - to continuously play the tracks in the current folder (MP3 mode).
- Note:** By default, the current folder/CD will be played continuously.
7. Scan:
 - Short press - to play the first 10 seconds of every track on the disc.
 - Long press - to play the first 10 seconds of the first track in each folder (MP3 mode).
8. Shuffle:
 - Short press - to play each track on the disc in a random sequence (CD mode).
 - Long press - to play each track in the selected folder in a random sequence (MP3 mode).
9. Scroll through longer track names, etc., on the display screen.
10. Change the displayed information.
11. Seek up:
 - Short press - to play the next track on the chosen audio source.
 - Long press - to scan forward through the current track.
12. Seek down:
 - Short press - to select the previous track on the chosen audio source.
 - Long press - to scan back through the current track.