
## PORTABLE MEDIA CONTROLS (STANDARD SYSTEM)

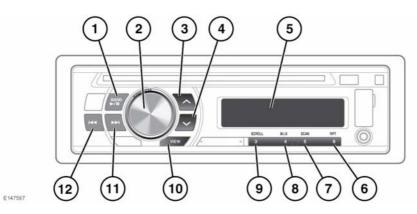

- 1. Pause/play.
- 2. Volume control/menu select:
  - · Rotate to adjust the volume.
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.
- 3. Previous folder (MP3 mode).
- 4. Next folder (MP3 mode).
- 5. Information display screen.
- **6.** Repeat:
  - Short press to continuously play the current track.
  - Long press to continuously play the tracks in the current folder (MP3 mode).

**Note:** By default, the current folder/CD will be played continuously.

## Scan:

- Short press to play the first 10 seconds of every track on the disc.
- Long press to play the first 10 seconds of the first track in each folder (MP3 mode).

## 8. Shuffle:

- Short press to play each track on the disc in a random sequence (CD mode).
- Long press to play each track in the selected folder in a random sequence (MP3 mode).
- **9.** Scroll through longer track names, etc., on the display screen.
- 10. Change the displayed information.
- **11.** Seek up:
  - Short press to play the next track on the chosen audio source.
  - Long press to scan forward through the current track.

## 12. Seek down:

- Short press to select the previous track on the chosen audio source.
- Long press to scan back through the current track.