


## PORTABLE MEDIA CONTROLS

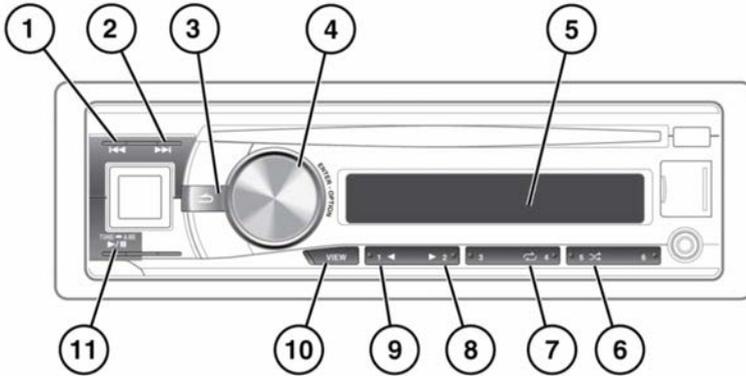

E145976

1. Seek down:
  - Short press - to select the previous track on the chosen audio source.
  - Long press - to scan back through the current track.
2. Seek up:
  - Short press - to play the next track on the chosen audio source.
  - Long press - to scan forward through the current track.
3. Back:
  - Short press - to return to the previous menu.
  - Long press - to close the menu.
4. Volume control/search/menu select:
  - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
  - Press during MP3 playback to search by folder name or by file name. See **60, MEDIA SEARCH**.
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.
5. Information display screen:
6. Shuffle: Press repeatedly to select from one of the following options.
  - Shuffle - the tracks are played in a random sequence (CD mode).
  - Shuffle folder - the tracks from the current folder are played in a random sequence (MP3 mode).
  - Shuffle all - all tracks from the current audio source are played in a random sequence (MP3 mode).
7. Repeat: Press repeatedly to select from one of the following options:
  - Repeat track - plays the current track continuously.
  - Repeat folder - the tracks from the current folder are played continuously (MP3 mode).

**Note:** By default, the current folder/CD will be played continuously.
8. Next folder (MP3 mode).
9. Previous folder (MP3 mode).
10. Change the displayed information.
11. Pause/play.