
## **PORTABLE MEDIA CONTROLS**

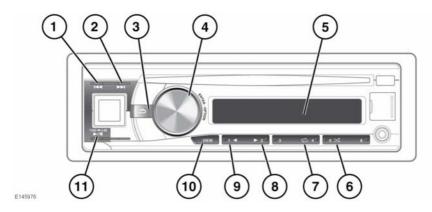

## 1. Seek down:

- Short press to select the previous track on the chosen audio source.
- Long press to scan back through the current track.

## 2. Seek up:

- Short press to play the next track on the chosen audio source.
- Long press to scan forward through the current track.

## 3. Back:

- Short press to return to the previous menu.
- Long press to close the menu.
- Volume control/search/menu select:
  - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
  - Press during MP3 playback to search by folder name or by file name. See 60, MEDIA SEARCH
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.

- 5. Information display screen:
- **6.** Shuffle: Press repeatedly to select from one of the following options.
  - Shuffle the tracks are played in a random sequence (CD mode).
  - Shuffle folder the tracks from the current folder are played in a random sequence (MP3 mode).
  - Shuffle all all tracks from the current audio source are played in a random sequence (MP3 mode).
- 7. Repeat: Press repeatedly to select from one of the following options:
  - Repeat track plays the current track continuously.
  - Repeat folder the tracks from the current folder are played continuously (MP3 mode).

**Note:** By default, the current folder/CD will be played continuously.

- 8. Next folder (MP3 mode).
- 9. Previous folder (MP3 mode).
- **10.** Change the displayed information.
- **11.** Pause/play.