


## AUDIO CONTROLS

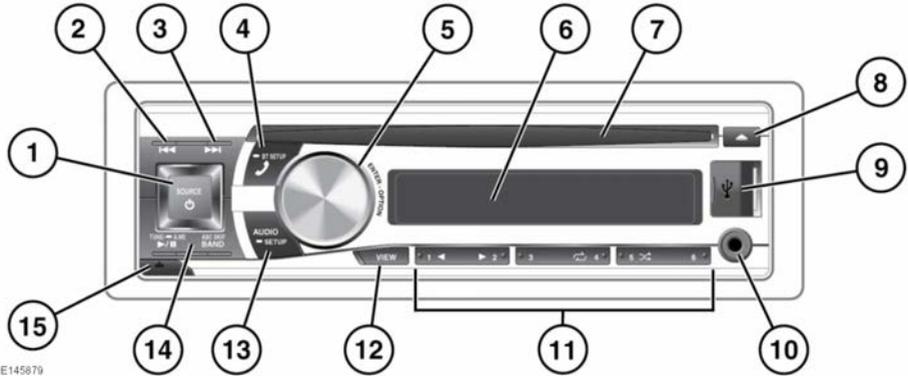

E145879

### 1. Power/source:

- Press and hold to turn the audio system on/off.
- Press briefly to switch source between **TUNER**, **DISC**, **USB AUDIO/iPod**, **BT AUDIO**, and **AUXILIARY**.

### 2. Seek down:

- Short press:
  - to auto-seek down the frequency to the previous radio station.
  - to select the previous track on the chosen audio source (CD, MP3, etc).
- Long press:
  - to seek continuously down through the Radio Frequencies (RF).
  - to scan back through the track on the chosen audio source (CD, MP3, etc).

### 3. Seek up:

- Short press:
  - to auto-seek up the frequency to the next radio station.
  - to select the next track on the chosen audio source (CD, MP3, etc).

### • Long press:

- to seek continuously up through the Radio Frequencies (RF).
- to scan forward through the track on the chosen audio source - (CD, MP3, etc).

### 4. Accept/disconnect a telephone call. Press and hold to access the **Bluetooth** setup menu.

### 5. Volume control/menu select:

- Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
- Press to select a menu item.

### 6. Audio information display.

### 7. CD loading slot.

### 8. CD eject.

### 9. USB connection.

### 10. Auxiliary audio input.

### 11. Preset buttons.

### 12. Change the displayed information.

### 13. **AUDIO/SETUP**: