


## AUDIO CONTROLS

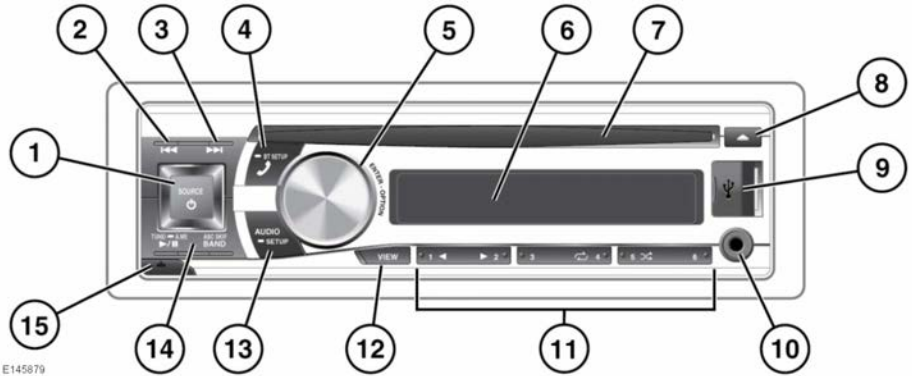

E145879

1. Power/source:
  - Press and hold to turn the audio system on/off.
  - Press briefly to switch source between **TUNER**, **DISC**, **USB AUDIO/iPod**, **BT AUDIO**, and **AUXILIARY**.
2. Seek down:
  - Short press:
    - to auto-seek down the frequency to the previous radio station.
    - to select the previous track on the chosen audio source (CD, MP3, etc).
  - Long press:
    - to seek continuously down through the Radio Frequencies (RF).
    - to scan back through the track on the chosen audio source (CD, MP3, etc).
3. Seek up:
  - Short press:
    - to auto-seek up the frequency to the next radio station.
    - to select the next track on the chosen audio source (CD, MP3, etc).
  - Long press:
    - to seek continuously up through the Radio Frequencies (RF).
    - to scan forward through the track on the chosen audio source - (CD, MP3, etc).
4. Accept/disconnect a telephone call. Press and hold to access the **Bluetooth** setup menu.
5. Volume control/menu select:
  - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
  - Press to select a menu item.
6. Audio information display.
7. CD loading slot.
8. CD eject.
9. USB connection.
10. Auxiliary audio input.
11. Preset buttons.
12. Change the displayed information.
13. **AUDIO/SETUP**: