
AUDIO CONTROLS

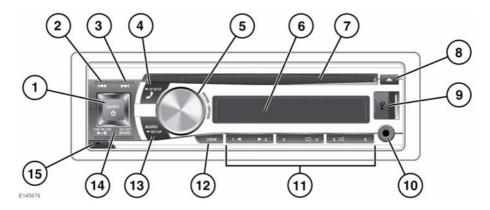

1. Power/source:

- Press and hold to turn the audio system on/off.
- Press briefly to switch source between TUNER, DISC, USB AUDIO/iPod, BT AUDIO, and AUXILIARY.

2. Seek down:

- Short press:
 - to auto-seek down the frequency to the previous radio station.
 - to select the previous track on the chosen audio source (CD, MP3, etc).
- Long press:
 - to seek continuously down through the Radio Frequencies (RF).
 - to scan back through the track on the chosen audio source (CD, MP3, etc).

3. Seek up:

- Short press:
 - to auto-seek up the frequency to the next radio station.
 - to select the next track on the chosen audio source (CD, MP3, etc).

Long press:

- to seek continuously up through the Radio Frequencies (RF).
- to scan forward through the track on the chosen audio source - (CD, MP3, etc).
- Accept/disconnect a telephone call. Press and hold to access the Bluetooth setup menu.
- 5. Volume control/menu select:
 - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
 - · Press to select a menu item.
- **6.** Audio information display.
- **7.** CD loading slot.
- 8. CD eject.
- 9. USB connection.
- **10.** Auxiliary audio input.
- 11. Preset buttons.
- **12.** Change the displayed information.

13. AUDIO/SETUP: