


TELEPHONE SYSTEM OVERVIEW

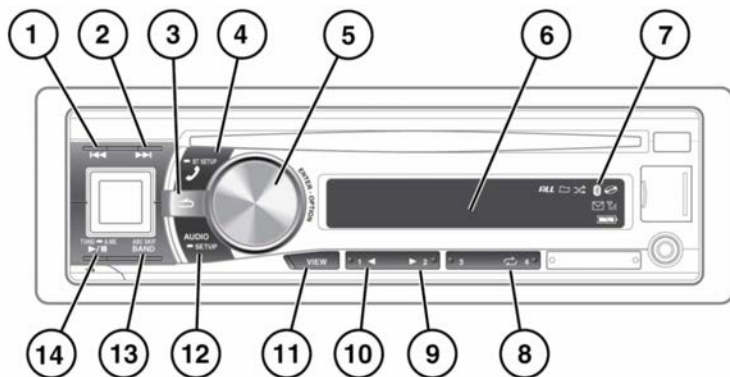

E146085

1. Select the previous letter during a phonebook search.
2. Select the next letter during a phonebook search.
3. Back:
 - Short press to return to the previous menu.
 - Long press to close the menu.
4. Accept/disconnect a telephone call.
5. Volume control/search/menu select:
 - Rotate to adjust the volume.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
6. Information display screen.
7. Illuminates when a telephone/media device is paired.
8. Presets:
 - Press to recall a quick-dial number and then press the accept/disconnect button to initiate a call.
 - With a phonebook entry active, press and hold the desired preset to store the number as a 'quick-dial'.
9. Switch to the waiting call.
10. Return to the original call.
11. Change the displayed information.
12. Access the telephone setup menu.
13. Switch the audio output between the audio system and the telephone.
14. Privacy mode: Mutes the microphone input.

TELEPHONE COMPATIBILITY

Please refer to the Ownership section of the Land Rover website at: www.landrover.com, for a list of compatible phones.

Note: The phones listed, have been tested for compatibility with Land Rover vehicles. Performance will vary, based on the phone's software version, battery condition, coverage, and your network provider. Phones are warranted by their manufacturer, not Land Rover.

SETTING THE VISIBILITY

The audio system must be set to 'visible' to enable the compatible phone to find it during the pairing process.