


## AUDIO CONTROLS (STANDARD SYSTEM)

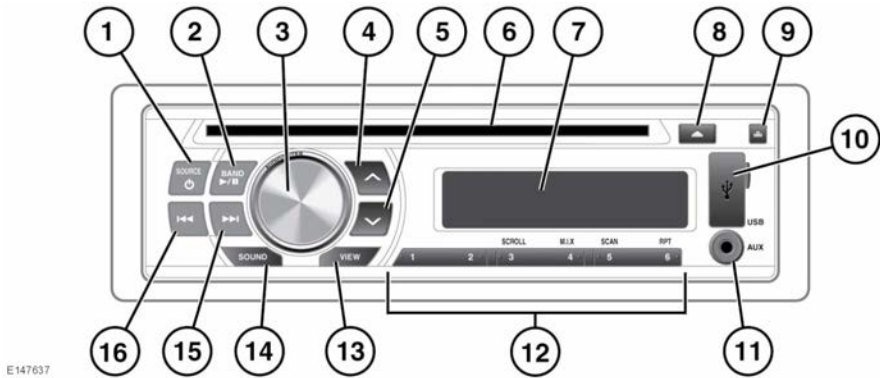

E147637

1. Power/source:
  - Short press - to switch source between **TUNER**, **DISC**, **USB AUDIO** and **AUXILIARY**.
  - Long press - turn the audio system on/off.
2. Select band (Radio mode) or pause/play the current audio source (CD/MP3 mode).
3. Volume control/menu select:
  - Rotate to adjust the volume.
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.
  - Press repeatedly to access the desired audio setting:
    - Bass.
    - Treble.
    - Balance.
    - Fader.
4. Previous folder (MP3 mode). In radio mode, press and hold to turn on Traffic Announcements (TA).
5. Next folder/TA.
6. CD loading slot.
7. Audio information display.
8. CD eject.
9. Release button: Release and remove the audio system face plate for security or to access the system reset button.
10. USB connection.
11. Auxiliary audio input.
12. Preset buttons.
13. Change the displayed information.
14. Audio settings/system setup.
  - Short press - to adjust the equalizer settings:
    - Flat.
    - Rock.
    - Pop.
    - Jazz.
    - Vocal.
    - Club.
  - Long press - to access the setup menu:
    - AF (Alternative Frequencies).
    - RDS (Radio Data System) regional.

- PI seek.

## 15. Seek up:

- Short press:
  - to auto-seek up the frequency to the next radio station.
  - to select the next track on the chosen audio source - CD, MP3, etc.
- Long press:
  - to seek continuously up through the Radio Frequencies (RF).
  - to scan forward through the track on the chosen audio source - CD, MP3, etc.

## 16. Seek down:

- Short press:
  - to auto-seek down the frequency to the previous radio station.
  - to select the previous track on the chosen audio source - CD, MP3, etc.
- Long press:
  - to seek continuously down through the Radio Frequencies (RF).
  - to scan back through the track on the chosen audio source - CD, MP3, etc.