
AUDIO CONTROLS (STANDARD SYSTEM)

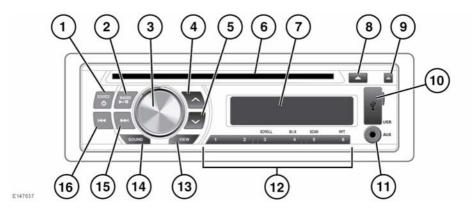

- 1. Power/source:
 - Short press to switch source between TUNER, DISC, USB AUDIO and AUXILIARY.
 - Long press turn the audio system on/off.
- 2. Select band (Radio mode) or pause/play the current audio source (CD/MP3 mode).
- 3. Volume control/menu select:
 - Rotate to adjust the volume.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
 - Press repeatedly to access the desired audio setting:
 - Bass.
 - Treble.
 - Balance.
 - Fader.
- Previous folder (MP3 mode). In radio mode, press and hold to turn on Traffic Announcements (TA).
- 5. Next folder/TA.

- 6. CD loading slot.
- **7.** Audio information display.
- 8. CD eject.
- Release button: Release and remove the audio system face plate for security or to access the system reset button.
- 10. USB connection.
- 11. Auxiliary audio input.
- 12. Preset buttons.
- **13.** Change the displayed information.
- **14.** Audio settings/system setup.
 - Short press to adjust the equalizer settings:
 - Flat.
 - Rock.
 - Pop.
 - Jazz.
 - Vocal.
 - Club.
 - Long press to access the setup menu:
 - AF (Alternative Frequencies).
 - RDS (Radio Data System) regional.

Audio system

PI seek.

15. Seek up:

- · Short press:
 - to auto-seek up the frequency to the next radio station.
 - to select the next track on the chosen audio source CD, MP3, etc.
- · Long press:
 - to seek continuously up through the Radio Frequencies (RF).
 - to scan forward through the track on the chosen audio source - CD, MP3, etc.

16. Seek down:

- · Short press:
 - to auto-seek down the frequency to the previous radio station.
 - to select the previous track on the chosen audio source CD, MP3, etc.
- · Long press:
 - to seek continuously down through the Radio Frequencies (RF).
 - to scan back through the track on the chosen audio source CD, MP3, etc.