
## **Entering the vehicle**


## Standard pick-up

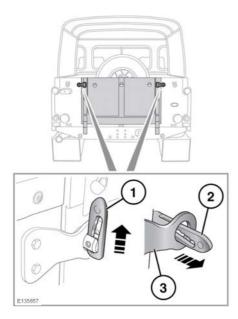

To unlatch the tailgate:

- 1. Slide the latch plates up to their highest position.
- 2. Pivot the latch plates down through 90 degrees.
- **3.** Pull the tailgate over both the latch plates. Reverse the procedure to close the tailgate.

## High capacity pick-up

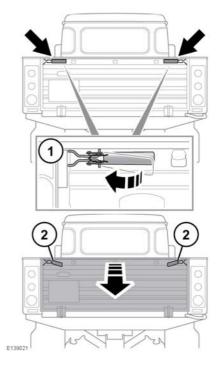

- Lever the latches outwards, toward the sides of the vehicle.
- **2.** Hold the latches open and carefully lower the tailgate.

Reverse the procedure to close the tailgate.

## **EMERGENCY KEY ACCESS (EKA)**

In the event of a remote control failure, follow the procedure to enter a unique four digit code. This will disarm the alarm system and re-mobilise the engine.

The code number will be recorded on the Security card. Do not leave this card in the vehicle.