

### LOW FUEL WARNING (AMBER)



Located in the fuel gauge, this illuminates when remaining fuel drops to 9 litres (2 gallons). Refuel at the first opportunity.