
INSTRUMENT PANEL

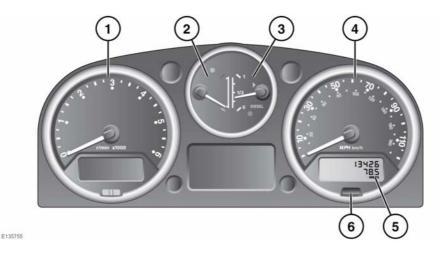

- 1. Tachometer.
- 2. Temperature gauge.
- Serious engine damage can occur if the vehicle is driven while the engine is overheating.

If the pointer moves onto the red line, severe engine damage can occur. If the engine overheats, stop the vehicle as soon as safety permits and allow the engine to idle. Do not switch the engine off immediately as the cooling system will stop operating. If the temperature does not reduce, or the problem re-occurs, seek qualified assistance before continuing.

Note: If engine temperature rises to the point where overheating may occur, there may be a noticeable reduction in engine power, and the Air Conditioning may cease operation. This is a normal operating strategy, to reduce load on the engine and assist with cooling. 1

Never allow the vehicle to run out of fuel. The resulting misfire may cause serious damage to the catalytic converter. Once the fuel level has dropped to the point where the range is approximately 80 km (50 miles), the low fuel warning lamp will illuminate.

As a reminder for the location of the fuel filler, there is an arrow next to the fuel pump symbol which points to the relevant side of the vehicle.

- 4. Speedometer.
- 5. Odometer and trip recorder display.
- 6. Trip recorder reset button.

3. Fuel gauge.