

Warning lamps

DIESEL PARTICULATE FILTER (DPF) (AMBER)



Illuminates when the DPF is approaching capacity. If this warning lamp illuminates, carry out the DPF regeneration procedure as soon as possible (see **69, DIESEL PARTICULATE FILTER (DPF)**).

ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



If the lamp remains on or illuminates while driving, a fault is detected. Avoid heavy brake application and seek qualified assistance urgently.

DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp flashes while driving, the DSC system is active.

A fault with the DSC system is indicated by the warning lamp illuminating continuously. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when the DSC system is switched off.

DIFFERENTIAL LOCK (AMBER)



Illuminates when the differential is locked. Continued illumination when the transmission has been unlocked may indicate transmission wind-up. Reversing then moving forward will usually rectify the problem. If illumination remains, seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are operating.

HIGH BEAM (BLUE)



Illuminates when the headlamps high beam is selected.

DIRECTION INDICATORS (GREEN)



The appropriate lamp flashes while a direction indicator is in use. If it fails to flash or flashes very rapidly, one of the bulbs has failed.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are operating.

TRAILER DIRECTION INDICATORS (GREEN)



Flashes when a trailer is attached and the direction indicators are in use. If there is no flash, a trailer bulb has failed.