

# Warning lamps

## DIESEL PARTICULATE FILTER (DPF) (AMBER)



Illuminates when the DPF is approaching capacity. If this warning lamp illuminates, carry out the DPF regeneration procedure as soon as possible (see **69, DIESEL PARTICULATE FILTER (DPF)**).

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



If the lamp remains on or illuminates while driving, a fault is detected. Avoid heavy brake application and seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp flashes while driving, the DSC system is active.

A fault with the DSC system is indicated by the warning lamp illuminating continuously. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when the DSC system is switched off.

## DIFFERENTIAL LOCK (AMBER)



Illuminates when the differential is locked. Continued illumination when the transmission has been unlocked may indicate transmission wind-up. Reversing then moving forward will usually rectify the problem. If illumination remains, seek qualified assistance as soon as possible.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are operating.

## HIGH BEAM (BLUE)



Illuminates when the headlamps high beam is selected.

## DIRECTION INDICATORS (GREEN)



The appropriate lamp flashes while a direction indicator is in use. If it fails to flash or flashes very rapidly, one of the bulbs has failed.

## SIDE LAMPS (GREEN)



Illuminates when the side lamps are operating.

## TRAILER DIRECTION INDICATORS (GREEN)



Flashes when a trailer is attached and the direction indicators are in use. If there is no flash, a trailer bulb has failed.