

## BEFORE STARTING OR DRIVING



If the vehicle is involved in a collision it should be checked by a Land Rover Dealer/Authorised repairer, or suitably qualified persons before starting or driving.

Following a collision the vehicle must be inspected thoroughly.

Check for:



- Fuel and fluid leaks
- Battery damage
- Wiring loom damage
- Damage to lamps
- Damage to steering, suspension, wheels and tyres
- Bodywork damage resulting in sharp or protruding edges
- Condition of door locks
- Condition and operation of seat belts
- Condition of child restraints and their fixing mechanisms.

**Note:** Collision damage may not be obvious. Deformity of parts may have occurred which could affect the safe operation of the vehicle. Safety system components should be inspected by your Dealer/Authorised Repairer as soon as possible.

## FUEL CUT-OFF SWITCH



**ALWAYS** check for fuel leaks before resetting the switch. These checks should be carried out by a Land Rover Dealer/Authorised repairer or suitably qualified persons.

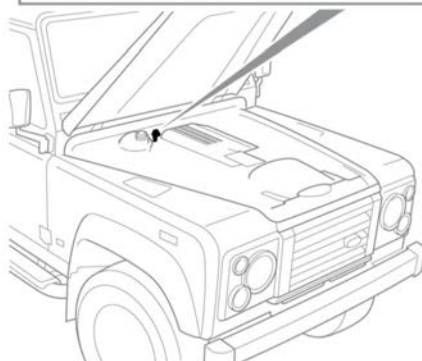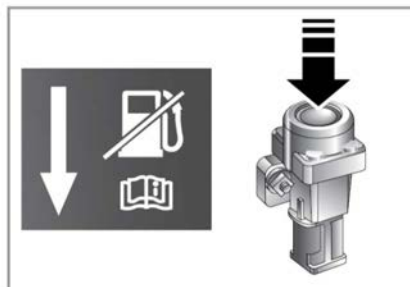

E164763

The fuel cut-off switch is a safety device which, in the event of a collision or sudden impact, automatically cuts off fuel supply to the engine.

The fuel cut-off switch is located to the rear of the engine compartment. When activated, the switch must be reset by pressing the rubber top before the engine can be restarted.