

1. With the transfer box in neutral, press the clutch and move the main gearbox into 2nd gear.
2. Release the clutch momentarily then press it again. Now attempt to select the desired range in the transfer box.
3. Select the appropriate gear in the main gearbox and pull away.

## RANGE CHANGING ON THE MOVE

To change from High to Low range on the move, the vehicle's speed must not exceed 8 km/h (5 mph):

1. Press the clutch.
2. Move the transfer lever to the neutral position.
3. Just before the road wheels stop turning and with the clutch still pressed, push the lever into Low range.

To change from Low to High range on the move:

1. Without pressing the clutch, apply slight rearward pressure to the lever.
2. Now press the clutch, release the accelerator and then pull back the lever into the neutral position.
3. Release the clutch for approximately three seconds, press it again and then pull back the lever into High range.
4. Select a suitable gear in the main gearbox and continue driving.


## DIFFERENTIAL LOCK

- ❗ Do not engage the differential lock if one or more of the wheels is slipping - this could damage the transmission.
- ❗ Do not engage the differential lock from the transfer neutral position.

**Note:** If the vehicle is driven on hard surface roads while the differential is locked, the steering will feel stiff, excessive tyre wear will occur and the transmission will be under excessive strain.

The transmission has a lockable differential between the front and rear propshafts. A locked differential will aid progress when driving off-road on loose and slippery surfaces. Make sure that the differential is not locked when driving on a hard surface, even when off-road.

The differential lock can be engaged or disengaged, either with the vehicle stationary or when travelling at road speeds below 60 km/h (40 mph). However, with the vehicle in motion, it is essential that the vehicle is travelling in a straight line, on firm ground and there is no wheel slip.

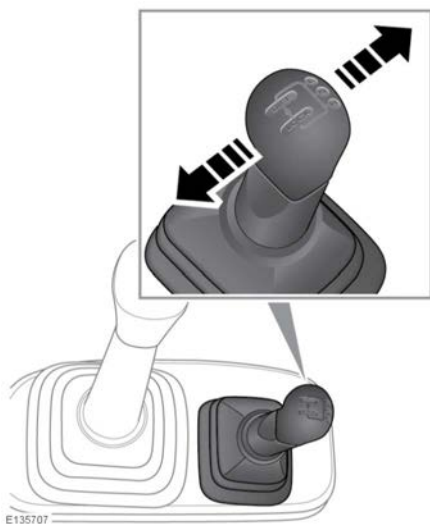

**Locking the differential:** With the transfer box in either High or Low range, press the clutch and move the lever to the left. When the lock is engaged, a warning lamp will illuminate in the Instrument panel.

**Unlocking the differential:** Press the clutch and move the lever to the transfer gearbox High or Low position. When the lock is disengaged, the warning lamp should extinguish. If not, transmission wind-up is the probable reason.

**Transmission wind-up:** To relieve the transmission strain, reverse the vehicle for a short distance and then drive forwards. The warning lamp should now extinguish.

If, after 3 attempts, the warning lamp has not extinguished, consult your Dealer/Authorised Repairer as soon as possible.