


## MANUAL SEATS

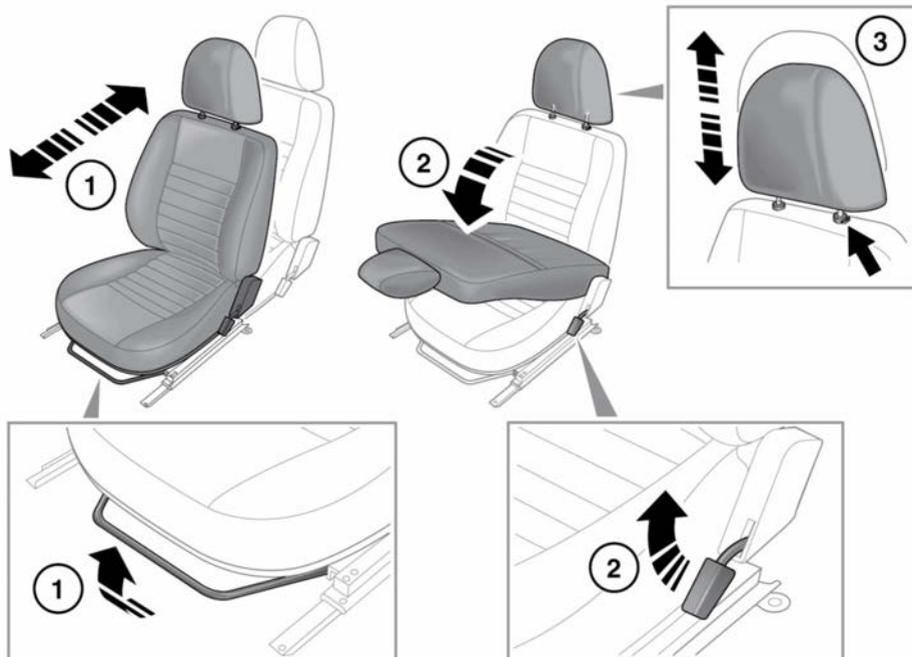


E135661

1. Lift the locking bar for forward and backward adjustment.
2. Lift the locking lever for seatback angle adjustment.
3. Squeeze the locking collar for head restraint height adjustment.

## SITTING IN THE CORRECT POSITION

-  **The driver and front seat passenger must not ride with the seat fully reclined.**
-  **Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.**

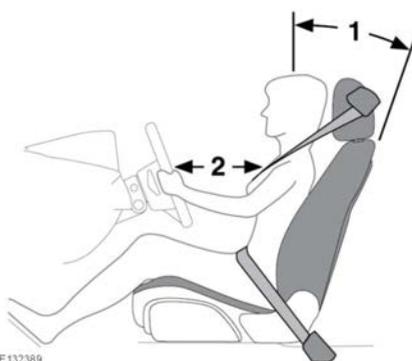

E132389