## Heating and ventilation

Press a switch to operate. The LED will illuminate.

Press again to switch off.


The heating elements in the windscreen will switch off automatically after approximately 8 minutes.

For maximum effect when defrosting/demisting, use these settings:

- · Air distribution to windscreen only.
- Temperature to maximum.
- Blower speed to position 3.
- · Set recirculation to fresh air.
- Press the A/C switch.

**Note:** The heated windscreen operates only while the engine is running.

## **HEATED SEATS**

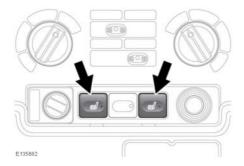

**Note:** To prevent the battery from becoming discharged, the seat heaters should be operated only when the engine is running.

With the starter switch at position II, press the appropriate switch to activate a seat heater. The seat heaters will maintain a factory set temperature. There are indicators in each switch.

Press again to turn off.