


## RADIO CONTROLS (STANDARD SYSTEM)

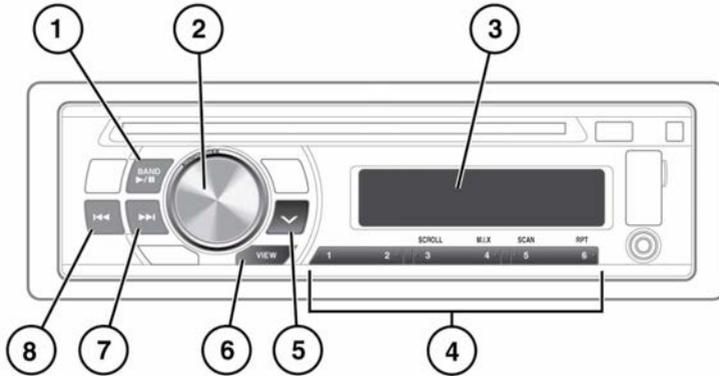

E147648

1. Band select/auto store:
  - Short press - to switch between bands. Select from **FM1**, **FM2**, **FM3**, **MW** and **LW**.
  - Long press - to automatically tune and store 6 Radio Frequencies (RF) as presets.
2. Volume control/menu select:
  - Rotate to adjust the volume.
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.
3. Information display screen.
4. Preset stations:
  - Short press - to select a preset station.
  - Long press - to store the current radio frequency.
5. Press and hold to turn on TA (Traffic Announcements).
6. Change the displayed information.
7. Seek up:
  - Short press - to auto-seek up the frequency to the next radio station.
  - Long press - to seek continuously up through the Radio Frequencies.
8. Seek down:
  - Short press - to auto-seek down the frequency to the previous radio station.
  - Long press - to seek continuously down through the Radio Frequencies.