

Telephone



Disconnect: Use to end or reject a call.



No phone connected.



Phone signal strength indicator.



Phone battery level indicator.



Bluetooth: Indicates that a **Bluetooth®** wireless technology device is connected.



Tick: Indicates that a **Bluetooth** wireless technology device is paired.



Voicemail: Press and hold to dial the stored voicemail number.




Scroll bar up arrow: Use to scroll up lists of detected phones, calls or phonebook entries.



Scroll bar down arrow: Use to scroll down lists of detected phones, calls or phonebook entries.

STEERING WHEEL CONTROLS

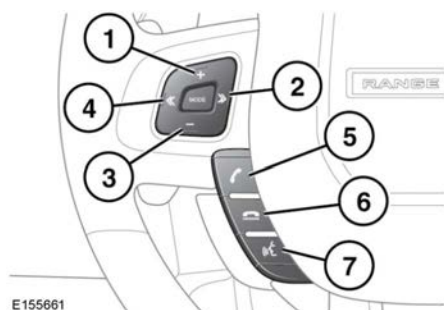

E155661

1. Increase the volume when in a call, scroll up a displayed list or number listed for a stored contact.
2. Press to scroll to the last 10 list and received calls.
3. Decrease the volume when in a call or scroll down a displayed list or a number listed for a stored contact.
4. Press to scroll back through received calls, the last 10 list and finally to exit the list.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the last 10 dialled list. Press and hold to access the phonebook list view.
6. Press to end or reject a call.
7. Press to activate voice control.

Note: When scrolling through a phonebook or the last 10 list, each contact is also displayed in the Message centre.

Note: In order to scroll through any last 10 list, the 'phone' button (5) must first be pressed.

CALL VOLUME

The phone call volume is operated by the audio system's volume control.

If the audio system is in use when a phone call is active, the audio system source is suppressed for the duration of the call.

PHONEBOOK

Contacts stored in the memory of a paired phone can be automatically downloaded to the vehicle's phonebook each time the phone is connected to the system. See **160, TELEPHONE COMPATIBILITY**.

Certain phones store the phonebook in 2 different areas, the SIM card and the phone memory. The vehicle system will access only those numbers stored in the phone memory.

To access contacts from the phonebook:

1. From the Phone menu, select **Phonebook**.
2. Using the keyboard, select the letter you wish to search under.
3. Select **List** to view the phonebook.
4. Identify the required contact from the displayed list and touch to call. If a contact has more than 1 number stored, select the required number from the list.

Note: *It may be necessary to use the scroll bar to see the entire list.*

There are also options to view more contact information, by selecting the corresponding **i** key.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's phonebook directory. These can be seen on the right side of each contact in the directory and will indicate 1 of the following types:



Default.



Mobile.



Home.



Work.