

TOUCH SCREEN CARE



Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact a Dealer/Authorised Repairer.

TOUCH SCREEN SETUP

Select **Set-up** from the **Home menu** screen.

The **Set-up** menu screen is divided into categories:

- Screen
- System
- Voice
- Audio

SCREEN SETTINGS

Volume pop-up: Displays the Volume pop-up on/off.

Screensaver: Changes the screensaver.

Time out home: The sub-menu selection screens can be set to revert to the **Home menu** screen after a predetermined length of time.

Theme: Changes the appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone on/off.

Clock adjust: Select the 12 or 24 hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

Note: *The clock can also be adjusted from the Touch screen time display.*

Home menu shortcuts: Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: *Some languages are not yet available for both the System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

Volume presets: Adjust the volume for the available system's announcements, for example, Parking aid, Phone, Voice, etc.

VOICE SETTINGS

- **Command list:** Pressing the 'I' soft key next to any command will display alternative ways of saying the same command.
- **Voicetags:** View the categories. Select a category to manage the Voicetags for the chosen system. See **158, VOICETAGS**.
- **Operating guide:** Select to view some brief Voice system instructions. Select **Voice tutorial** for more detailed Voice system instructions (cancel via the displayed pop-up or by pressing and holding the Voice button).
- **Preferences:** Select to alter the following settings:
 - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training programme first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- **Voice feedback:** Select **On/Off**.