
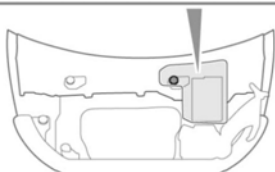
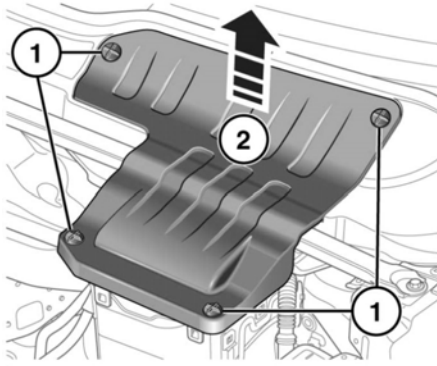


UNDER BONNET COVERS - REMOVAL



Left side under bonnet cover

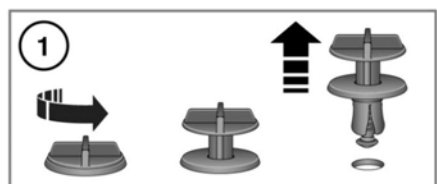

E153608

1. Unscrew the turnbuckles clips counter clockwise and remove.
2. Lift the front edge of the cover and slide forward to remove.

Right side under bonnet cover

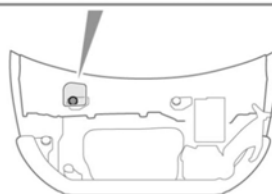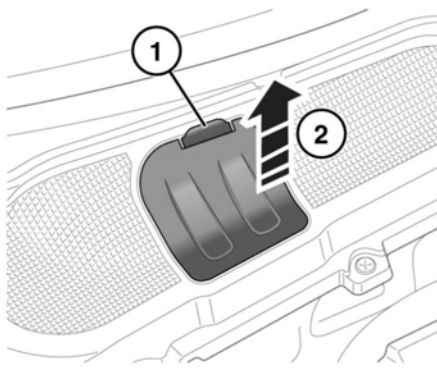

E153609

1. Pull the cover securing catch towards the front of the vehicle to release.
2. While still holding the cover securing catch, lift up the edge of the cover to remove.

UNDER BONNET COVERS - REFITTING

Left side under bonnet cover



Before refitting the under bonnet cover, make sure no pipes, cables or other items, have been trapped between the cover and the casing.

1. Place the under bonnet cover over the casing, making sure all holes are aligned.
2. Push the cover down firmly and screw the turnbuckle clips clockwise to tighten.

Right side under bonnet cover

1. Place the 2 locating lugs at the rear edge of the cover into the surrounding panel.