

fluid top up.....	223	Wheel spin.....	96
headlamps.....	58	Windows	
Weights		anti-trap protection.....	70
gross vehicle weights.....	262	driver controls.....	
roof load.....	262	operation.....	69
roof rack weight.....	262	reset.....	214
tow ball/hitch.....	83	roof blind.....	70
towing.....	83	Winter park position.....	213
vehicle weights.....	262	Winter tyres.....	241
Wheel changing		Wipers and washers.....	56
important information.....	250	drip wipe.....	58
locking wheel nuts.....	250	driver controls.....	
recommended process.....	251	fluid level.....	223
safety warnings.....	249	rain sensor.....	57
spare wheel.....	250	speed-dependent mode.....	58
temporary spare wheel.....	250	winter park position.....	58
tilt sensor.....	251		
tool kit.....	249		
use of spare tyre.....	250		
Wheel chocks use.....	250		
Wheels and tyres			
age degradation.....	241		
changing a tyre.....	244		
checking the pressures after a repair.....	247		
flat spots.....	241		
full size replacements.....	244		
Indian regulations.....	242		
pressures.....	238		
puncture repair.....	245		
puncture repair safety.....	245		
repair kit.....	245		
repair kit use.....	245		
repair procedure.....	246		
replacements.....	240		
snow chains.....	242		
temporary use spare.....	244		
TPMS.....	243		
TPMS warning lamp.....	47		
tyre care.....	238		
tyre speed ratings.....	238		
tyre wall markings.....	237		
valves.....	240		
wheel alignment.....	262		
winter tyres.....	241		

X

Xenon headlamps.....	208
----------------------	-----