

Exiting the vehicle

TILT SENSOR


The tilt sensor detects any change to the vehicle's angle to the ground. When the alarm is armed and the vehicle is double locked, any change in the vehicle's angle will activate the tilt alarm.

Note: The tilt sensors can be temporarily disabled for the next time the vehicle is locked. See **42, INSTRUMENT PANEL MENU**. The sensors will be automatically enabled the next time the vehicle is double locked with the Smart key.

Note: If the vehicle was locked with the Smart key, operating an interior door release lever will unlock only that door. If the door is opened the alarm will sound.

Note: If the vehicle has been Double locked, the interior door release levers will not operate. The vehicle must be unlocked using the Smart key.

DOOR LOCKS AND RELEASE LEVERS

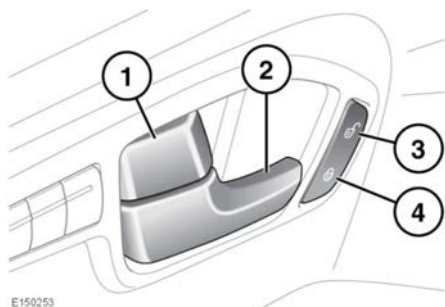

1. Press a locking lever to lock a door. Pull the lever back to unlock. Operating either front door locking levers will lock or unlock all of the doors.
2. Pull a release lever to open a front door. To unlock and open a rear door, first operate the lock lever, then pull the release lever.
3. Press the master unlock button to unlock all of the doors and the tailgate.
4. With all of the doors closed, press the master lock button to lock all of the doors and the tailgate.