

# Exiting the vehicle

**Note:** In this state, an open window or sunroof will cause the alarm to sound due to the movement of air currents. For this reason, make sure all of the windows and the sunroof are fully closed before Double locking the vehicle.

## INTERIOR PROTECTION

The Interior protection feature of the Full alarm system may be temporarily disabled via the **Vehicle Set-up** menu, see **40, INSTRUMENT PANEL MENU**.


**Note:** Once enabled, this setting will activate the next time the vehicle is Double locked with the Smart key.

## GLOBAL CLOSING

 **Make sure that no children, pets, or obstructions are in any open aperture, before operating Global closing. Safety mechanisms are in place to prevent serious injury, however, injuries can still occur.**

Press and hold the lock button for 3 seconds. The vehicle will Single lock and the Full alarm will be activated immediately. After 3 seconds, any open windows will be closed. This feature can be enabled/disabled via the **Vehicle Set-up** menu, see **40, INSTRUMENT PANEL MENU**.

## DOOR LOCKS AND RELEASE LEVERS

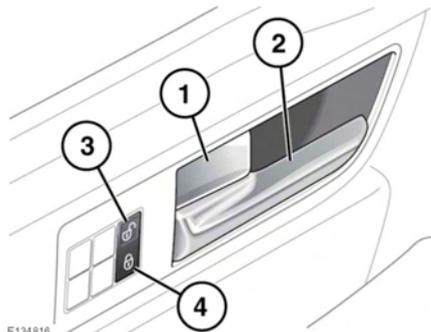

From inside the vehicle, all of the doors can be locked by pressing either the driver or passenger lock lever (1).

Each rear door can be individually locked by pressing the appropriate locking lever.

To unlock and open a front door, pull the door handle (2). To unlock and open a rear door, first operate the lock lever, then pull the door handle.

**Master lock/unlock buttons:** To lock (4) or unlock (3) the vehicle, press the respective button on the door.

**Note:** The Master unlock button is inhibited when the vehicle is locked with the Smart key.

## MISLOCK

When attempting to lock the vehicle, if one or more of the doors, the bonnet, or the tailgate are not fully closed, the vehicle will fail to lock and the horn will emit two tones. The vehicle will not fully lock until all of the doors, the bonnet, and the tailgate are completely closed.