

SINGLE LOCKING

 **Before exiting the vehicle, always make sure that the gear selector is in the Park (P) position, the engine is turned off, the Electric Parking Brake (EPB) is applied, and the Smart key is removed from the vehicle.**

Single locking secures the vehicle and prevents the doors from being opened from outside. The doors may still be unlocked and opened from inside the vehicle. In this state, only the Perimeter alarm is activated. See **9, PERIMETER ALARM.**

DOUBLE LOCKING

 **Before exiting the vehicle, always make sure that the gear selector is in the Park (P) position, the engine is turned off, the Electric Parking Brake (EPB) is applied, and the Smart key is removed from the vehicle.**

 **Never Double lock the vehicle with people, children, or pets inside. In the event of an emergency, they would be unable to escape and the emergency services would be unable to release them quickly.**

Double locking secures the vehicle and prevents the doors from being opened from inside or outside of the vehicle. The doors cannot be unlocked or opened from inside the vehicle when Double locked.

This provides additional security if the vehicle is left unattended. The vehicle cannot be opened by breaking a window and operating the door locks from inside.

Additionally, Double locking also activates the Full alarm system. See **9, FULL ALARM.**

PERIMETER ALARM

 No modifications or additions should be made to the Anti-theft system. Such changes could cause the system to malfunction.

Once the Perimeter alarm is armed, the alarm system will sound if:

- The bonnet, tailgate, or a door is opened.
- The vehicle's battery is disconnected.
- An attempt is made to disconnect the alarm siren.

If the vehicle is fitted with a Battery backed-up sounder, the sounder will sound if the battery is disconnected, or an attempt is made to disconnect the sounder.

Note: *This setting should be used in circumstances, such as travelling on a ferry, when pets are to be left in the vehicle, or if a window must be left open, etc.*

FULL ALARM

When the Full alarm is activated, the alarm system will sound if:

- The bonnet, tailgate, or a door is opened.
- Movement is detected within the vehicle's interior.
- A window, the front or rear windscreen, or the sunroof glass is broken.
- The vehicle is raised or tilted.

If the vehicle is fitted with a Battery backed-up sounder, the alarm system will also sound if:

- The vehicle's battery is disconnected.
- An attempt is made to disconnect the alarm siren.
- An attempt is made to disconnect the Battery backed-up sounder.