


7 seat vehicles: The tool kit is stowed behind an access cover in the loadspace area.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

Note: Examine the jack occasionally, clean and grease the moving parts, particularly the screw thread, to prevent corrosion.


REMOVING THE SPARE WHEEL

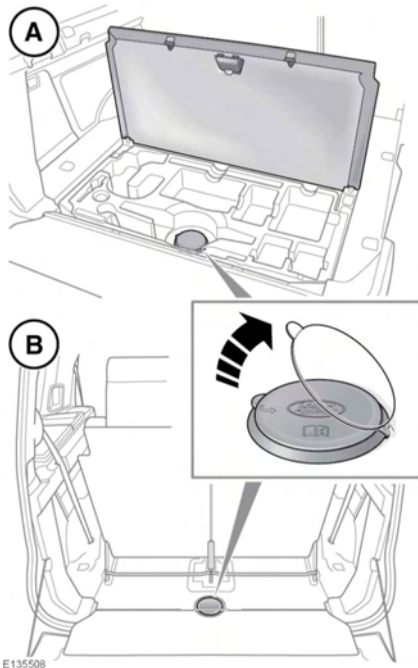


Note: Before removing the spare wheel, take note of its stowage position. The wheel to be changed must be correctly stowed in its place.

On 5 seat vehicles (A)

- Open the rear loadspace floor panel.
- Remove the cover for access to the spare wheel hoist winch spindle.
- Remove all of the tools from the vehicle's tool kit. See 236, TOOL KIT.

 Remove the spare wheel prior to jacking the vehicle, to avoid destabilising the vehicle, when raised.

 Wheels are heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or manoeuvring the wheels.