


7 seat vehicles: The tool kit is stowed behind an access cover in the loadspace area.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

Note: Examine the jack occasionally, clean and grease the moving parts, particularly the screw thread, to prevent corrosion.

REMOVING THE SPARE WHEEL

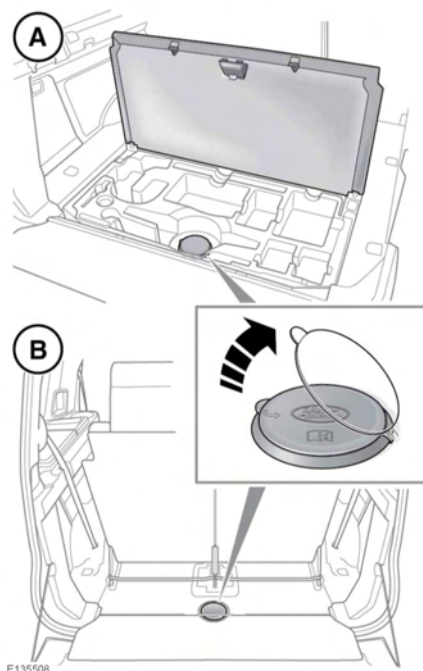

⚠ Remove the spare wheel prior to jacking the vehicle, to avoid destabilising the vehicle, when raised.

⚠ Wheels are heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or manoeuvring the wheels.

Note: Before removing the spare wheel, take note of its stowage position. The wheel to be changed must be correctly stowed in its place.

On 5 seat vehicles (A)

- Open the rear loadspace floor panel.
- Remove the cover for access to the spare wheel hoist winch spindle.
- Remove all of the tools from the vehicle's tool kit. See **236, TOOL KIT**.