


ELECTRIC SEATS

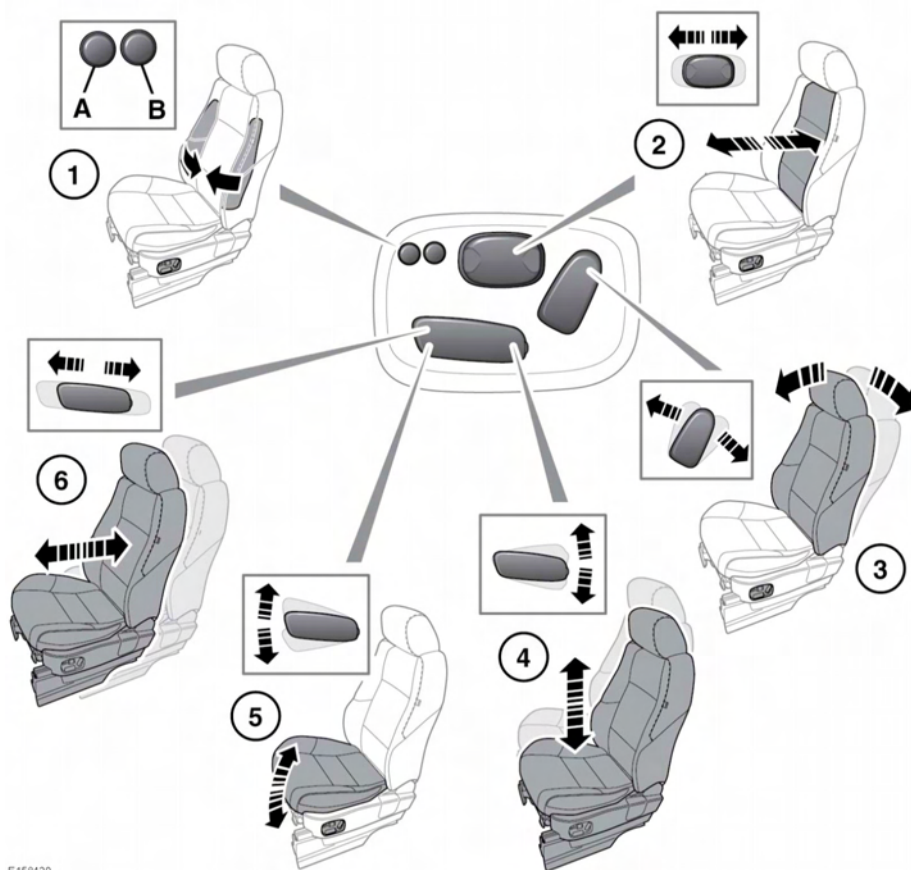

E158420



Do not adjust the seat while the vehicle is moving. Doing so could cause a loss of vehicle control and personal injury.

1. Bolster adjustment:
A. Bolster inflate.
B. Bolster deflate.
2. Lumbar support adjustment.
3. Seat back angle adjustment.
4. Height adjustment.

5. Cushion tilt adjustment.

6. Forward and rearward adjustment.

To adjust the seats, the Smart key must be in the vehicle and the ignition switched on.

RESTRICTED SEAT TRAVEL



If seat movement stops unexpectedly during adjustment, check for and remove any obstructions.