


1. Press the Memory store (**M**) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds, to memorise the current settings.
MEMORY (1, 2 or 3) SETTINGS SAVED will be displayed in the Message centre, accompanied by an audible chime to confirm that the settings have been memorised.
3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message centre.

A seat position will only be memorised during the 5 second active period.

Any existing settings will be over-written when programming a memory position.

FOLDING ARMREST

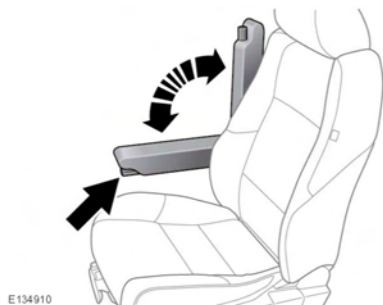

If fitted, the folding armrest may be stowed by moving to the vertical position. Use the adjuster wheel (arrowed) to set the required height.