

- Daylight running lamps are on.

If a system fault is detected, the headlamps will attempt to move to the central position, and remain stationary. The AFS warning lamp will illuminate to indicate that a fault is present.



If the warning lamp illuminates, contact your Dealer/Authorised Repairer as soon as possible.

HEADLAMPS - DRIVING ABROAD

The headlamps have a beam pattern that eliminates the need to mechanically adjust the lamps or add any external stick-on decals.

To configure the High beam assist system for the side of the road on which you are driving, proceed as follows:

1. Using the menu control on the steering wheel, select **Vehicle set-up** via the Instrument panel menu.
2. Select **High Beam Assist**.
3. Select **Drive on Left** or **Drive on Right**, for the side of the road that you are driving on.

HEADLAMP LEVELLING

(Halogen headlamps only)

Use the headlamp levelling control to account for vehicle loading changes.

Vehicle load	Switch position
Driver only	0
Driver and front seat passenger	0
Driver and passengers in all seats	Rotate down one position from 0
Maximum Gross Vehicle Weight (GVW)	Rotate down two positions from 0
Maximum rear axle load	Rotate down three positions from 0

HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.