## FITTING THE DETACHABLE DRAWBAR RECEIVER (Australia only)



- 1. Remove the protective cover from the vehicle mounting and stow it into the drawbar receiver stowage area.
- The receiver can be installed only when the green locking lever is in the unlocked position.
- **3.** Insert the receiver into the vehicle mounting and push firmly upwards until it locks into position.
- 4. The red marker must be completely covered by the green locking lever.

5. Unfold the key and turn it counter-clockwise to lock the receiver, before inserting a drawbar. Remove the key and store it in a safe place.

When the detachable drawbar receiver is not required for immediate use, it should be removed and stowed in the appropriate place.

## REMOVING THE DETACHABLE DRAWBAR RECEIVER

Removal of the drawbar receiver is the reverse of fitting.